



Audio Interview Recorder

Quickstart Guide

① When you power on the **AIR**, it will show a starting screen for about 50 seconds, and then emit a double-beep.

You will now be asked to check the time and date. If it is right, press **REC**, if it is wrong, press **PAUSE** and adjust it.

② Next you will see the **Idle** screen. When you are ready to start a recording, press **REC**.

First, the AIR checks its drives for blank discs. If any are missing or not blank, the un-blank discs will be ejected and you will be prompted to place blanks in specific drives.

When you have done this, press **REC** to continue to the microphone level test.

③ To test the microphones, you are asked to speak at a normal volume. The screen will show a volume level meter for each microphone.

You can only press **REC** to continue when the AIR has detected audio from both microphones.

④ The actual recording will now start, indicated by a double-beep.

The recording screen shows left and right volume level meters and the current time.

⑤ When you want to finish the recording, hold the **STOP** button for about 2 seconds. The discs will be finalised, and then ejected.